

CURRENT MODEL RANGE

	F86-34 (4x2)	Swedish (4x2)
	F86-38 (4x2)	Swedish (4x2)
	F86- 54 (4x2)	Swedish (4x2)
	FB86-34 (6x2)L	Swedish (6x2) Lazy
	FB86-49 (6x2)L	Swedish (6x2) Lazy
8640	F86A-28 (6x4)R	Local (6x4) Rockwell
	F86A-32 (6x4)R	Local (6x4) Rockwell
	F86A-49 (6x4)R	Local (6x4) Rockwell
	F86A-49 (8x4)R	Local (8x4) Rockwell
	F86A-55 (8x4)R	Local (8x4) Rockwell
8121	G88-35 (4x2)	Swedish (4x2)
8126	G88-35 (6x2)L	Swedish (6x2) Lazy
8127	G88A-30 (6x4)R	Local (6x4) Rockwell
8127	G88-35 (6x4)V	Swedish (6x4) Volvo Axles
8127	G88-45 (6x4)V	Swedish (6x4) Volvo Axles
8127	G88-49 (6x4)V	Swedish (6x4) Volvo Axles
8127	G88A-35 (6x4)HD	Local (6x4) HD, Mack Susp. Volvo Axles
	G89-35 (4x2)	Swedish (4x2)
8940	G89-35 (6x4)V	Swedish (6x4)V
	G89-49 (6x4)V	Swedish (6x4)V
	G89A-30 (6x4)R	Local (6x4) Rockwell

	N7 - 4170,	(4x2)	Swedish	(4x2)	
	N7 - 6170	(4x2)	Swedish	(4x2)	
6070	N7 - 3770	(6x2)	Swedish	(6x2)	Lazy
	N7 - 6170	(6x2)	Swedish	(6x2)	Lazy
	N7A- 3770	(6x4)R	Local	(6x4)	Rockwell
	N10 - 4170	(4x2)	Swedish	(4x2)	
	N10 - 6170	(4x2)	Swedish	(4x2)	
	N10 - 3770	(6x2)	Swedish	(6x2)	Lazy
	N10 - 6170	(6x2)	Swedish	(6x2)	Lazy
6100	N10 - 3770	(6x4)V	Swedish	(6x4)	Volvo Axles
	N10 - 6170	(6x4)V	Swedish	(6x4)	Volvo Axles
	N10A- 3770	(6x4)R	Local	(6x4)	Rockwell
	N12 - 4170	(4x2)	Swedish	(4x2)	
	N12 - 6170	(4x2)	Swedish	(4x2)	
	N12 - 3770	(6x2)	Swedish	(6x2)	Lazy
	N12 - 6170	(6x2)	Swedish	(6x2)	Lazy
6120	N12 - 3770	(6x4)V	Swedish	(6x4)	Volvo Axles
	N12 - 6170	(6x4)V	Swedish	(6x4)	Volvo Axles
	N12A- 3770	(6x4)R	Local	(6x4)	Rockwell